



CODING TABLE

SID RNAV BOKAM 1A RWY 08							CRUZ / Comandante Ariston Pessoa (SBJE)					SBJE_SID_00C		29 MAR 18	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	BOKAM	N/A	N/A	N/A	CA	84.60° Mag 63.58° True	N/A	N/A	+1000	N/A	N/A	N/A	N/A	N/A	RNP 1
20	BOKAM	N/A	N/A	BOKAM	DF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	N/A	RNP 1
10	ESDAB	N/A	N/A	BOKAM	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	RNP 1
20	ESDAB	N/A	N/A	ESDAB	TF	192.57° Mag 171.34° True	N/A	N/A	N/A	N/A	N/A	18.00	N/A	N/A	RNP 1
SID RNAV ISUPI 1A – PEPER 1A RWY 08							CRUZ / Comandante Ariston Pessoa (SBJE)					SBJE_SID_00C		29 MAR 18	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	ISUPI	N/A	N/A	N/A	CA	84.60° Mag 63.58° True	N/A	N/A	+1000	N/A	N/A	N/A	N/A	N/A	RNP 1
20	ISUPI	N/A	N/A	ISUPI	DF	N/A	R	N/A	N/A	N/A	N/A	N/A	N/A	N/A	RNP 1
10	PEPER	N/A	N/A	N/A	CA	84.60° Mag 63.58° True	N/A	N/A	+1000	N/A	N/A	N/A	N/A	N/A	RNP 1
20	PEPER	N/A	N/A	JE001	DF	N/A	L	N/A	N/A	N/A	N/A	N/A	N/A	N/A	RNP 1
30	PEPER	N/A	N/A	PEPER	TF	279.72° Mag 258.61° True	N/A	N/A	N/A	N/A	N/A	80.80	N/A	N/A	RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
BOKAM	S 03:26:31.46W 40:08:36.48
ESDAB	S 03:44:23.40W 40:05:54.00
ISUPI	S 03:21:53.40W 40:31:20.40
JE001	S 02:50:17.05W 40:27:12.99
PEPER	S 03:06:22.20W 41:46:24.60

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE

DER	Latitude / Longitude (WGS84) DD:MM:SS.SS	Elevation (FT)
08	S 02:54:07.18 W 40:20:54.53	89