



CODING TABLE

STAR RNAV VACAR 1C RWY 16R					NATAL /Augusto Severo, MIL (SBNT)							SBNT_STAR_01R		03 JAN 19	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	ENROUTE	N	N/A	VACAR	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1
20	ENROUTE	N	N/A	ARPUK	TF	35.89° Mag 14.17° True	N/A	N/A	+17000	N/A	N/A	58.95	N/A	OTHER	RNAV 1
30	ENROUTE	N	N/A	BIVIV	TF	36.12° Mag 14.60° True	N/A	N/A	+1000	N/A	N/A	32.72	N/A	OTHER	RNAV 1
40	ENROUTE	N	N/A	IVSIK	TF	55.28° Mag 33.91° True	N/A	N/A	N/A	N/A	N/A	24.34	N/A	OTHER	RNAV 1
50	ENROUTE	N	N/A	NT376	TF	96.35° Mag 75.01° True	R	N/A	+4000	N/A	N/A	6.52	N/A	IAF	RNAV 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VACAR	S 07:39:55.20W 36:10:07.20
ARPUK	S 06:42:29.73W 35:55:34.95
BIVIV	S 06:10:41.16W 35:47:17.59
IVSIK	S 05:50:23.40W 35:33:39.60
NT376	S 05:48:41.80W 35:27:20.60

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE