



## CODING TABLE

STAR RNAV VACAR 1E RWY 16L					NATAL /Augusto Severo, MIL (SBNT)							SBNT_STAR_01O		03 JAN 19	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	ENROUTE	N	N/A	VACAR	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ENROUTE	N	N/A	SEVIL	TF	49.45° Mag 27.64° True	N/A	N/A	19000	N/A	N/A	42.12	N/A	OTHER	RNAV 1 or RNP 1
30	ENROUTE	N	N/A	ANPED	TF	49.03° Mag 27.59° True	N/A	N/A	N/A	N/A	N/A	61.29	N/A	OTHER	RNAV 1 or RNP 1
40	ENROUTE	N	N/A	NEBUG	TF	348.20° Mag 326.80° True	N/A	-6000	+5000	N/A	N/A	11.44	N/A	OTHER	RNAV 1 or RNP 1
50	ENROUTE	N	N/A	IVSIK	TF	346.45° Mag 325.08° True	N/A	N/A	N/A	N/A	N/A	9.54	N/A	OTHER	RNAV 1 or RNP 1
60	ENROUTE	N	N/A	NT363	TF	93.55° Mag 72.18° True	N/A	N/A	+4000	N/A	N/A	6.85	N/A	IAF	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VACAR	S 07:39:55.20W 36:10:07.20
SEVIL	S 07:02:26.40W 35:50:26.40
ANPED	S 06:07:52.20W 35:21:53.40
NEBUG	S 05:58:15.00W 35:28:10.80
IVSIK	S 05:50:23.40W 35:33:39.60
NT363	S 05:48:16.80W 35:27:06.50

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE