



CODING TABLE

IAC ILS W or LOC W RWY 16L					NATAL / Augusto Severo (SBNT)							SBNT_IAC_01D		01 MAR 18	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	Approach	N/A	NTL	EGEGI	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	Approach	N/A	NTL	NT004	AF	N/A	R	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
30	Approach	N	NTL	CASTO	AF	N/A	R	N/A	+2000	-180KT	N/A	N/A	N/A	OTHER	N/A
10	Final	N/A	NTL	CASTO	IF	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	IF	N/A
20	Final	N	INT	BUXUP	CF	162.39° Mag	N/A	N/A	+1796	N/A	N/A	2.59	0.00	FAF	N/A
30	Final	Y	INT	SDF01*	CF	162.39° Mag	N/A	N/A	+800	N/A	N/A	2.90	-3.00	SDF	N/A
40	Final	Y	INT	RW16L	CF	162.39° Mag	N/A	N/A	+204	N/A	N/A	2.10	-3.00	LTP/FTP	N/A
10	Missed Ap.		N/A	N/A	VA	162.39° Mag	N/A	N/A	+1000	N/A	N/A	N/A	N/A	N/A	N/A
20	Missed Ap.	Y	NTL	VUDUT	CF	155.01° Mag	L	N/A	+2000	N/A	N/A	N/A	N/A	OTHER	N/A
30	Missed Ap.	Y	NTL	VUDUT	HM	335.00° Mag	R	N/A	+2000	N/A	N/A	1.00 min	0.00	MAHF	N/A

(*) Altitude restriction. For coding purpose only.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
EGERI	S 06:00:46.96W 35:19:55.88
NT004	S 05:51:16.80W 35:22:16.53
CASTO	S 05:48:11.04W 35:19:53.13
BUXUP	S 05:50:12.28W 35:18:15.12
SDF01	S 05:52:28.16W 35:16:25.26
RW16L	S 05:54:06.56W 35:15:05.69
VUDUT	S 06:04:12.06W 35:04:44.66

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT