



CODING TABLE

IAC ILS T ou/or LOC T RWY 08					BOA VISTA /Atlas Brasil Cantanhede, INTL (SBBV)							SBBV_IAC_00Y		18 JUL 19	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	BVI	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	BVI	BVI	FC	292.33° Mag 276.77° True	N/A	N/A	+2000	N/A	N/A	7.00	N/A	---	N/A
30	APCH	N/A	IBV	ABREU	CF	78.48° Mag 62.96° True	L	N/A	+1910	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	ABREU	IF	N/A	N/A	N/A	+1910	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	IBV	BVI06*	CF	78.55° Mag 63.01° True	N/A	N/A	+1020	N/A	N/A	2.84	-3.01	SDF	N/A
30	FINAL	N/A	IBV	RWY08	CF	78.57° Mag 63.01° True	N/A	N/A	@310	N/A	N/A	2.16	-3.01	LTP/FTP	N/A
10	MA	N/A	IBV	N/A	CA	78.49° Mag 62.93° True	N/A	N/A	+1500	N/A	N/A	N/A	N/A	---	N/A
20	MA	N/A	N/A	BVI	DF	N/A	L	N/A	+3000	N/A	N/A	N/A	N/A	MAHF	N/A
20	MA	N/A	BVI	BVI	HM	292.33° Mag 276.77° True	R	N/A	+3000	N/A	N/A	N/A	N/A	MAHF	N/A

* Fictitious point = for coding purpose only.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
IBV	N 02:51:11.48W 60:40:36.05
BVI	N 02:51:07.57W 60:41:12.81
ABREU	N 02:48:10.11W 60:46:30.22
BVI06	N 02:49:27.83W 60:43:58.46
RWY08	N 02:50:26.93W 60:42:03.05

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT